

QUICK
START
GUIDE

gizmosmart
Be in control. Anytime, Anywhere

< Remote Control >

GS-RC-ZB-001



Setup Remote
Control



Add Remote
Control to
GizmoLife app



Start using the
Remote Control

Remote Control is used to control the alarm system's mode remotely.



Step 1: Setup Remote Control >>

Parts Identification

1. LED Indicator:

- **Flashes after pressing button:**
The remote control is transmitting signal
- **Flashes twice:**
The remote control has successfully joined the Connected Gateway.

2. Away/Learn Button

Press the button to arm the control panel in away mode

3. Panic Button


Press and hold the button for 3 seconds to activate the panic alarm

4. Home Button

Press the button to arm the control panel in home mode


5. Disarm Button

Press the button to disarm the control panel

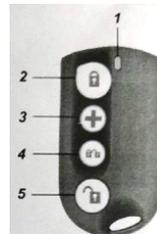

Step 1: Setup Remote Control >


Install given battery to remote control.
Open the cover on the backside with a coin, holding slot to open the cover.

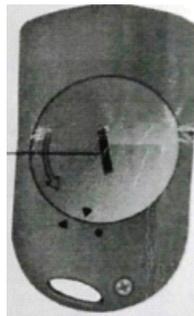

Step 2: Adding Remote Control >

Step A


Open GizmoLife App Dashboard and click on “+” button to Add device

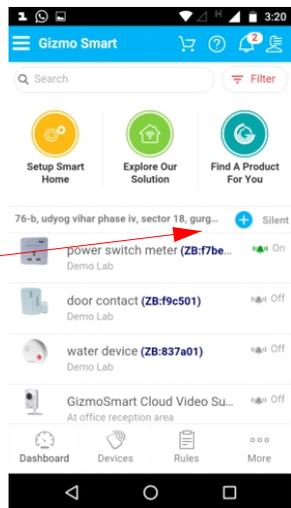

Step 2: Adding Remote Control

Step B


Click on Scan Devices
to set Hub in Learning
Mode

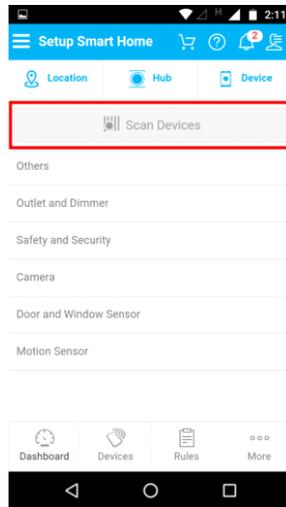

Step 2: Adding Remote Control >>

Step C

Click on Scan Devices to set Hub in Learning Mode

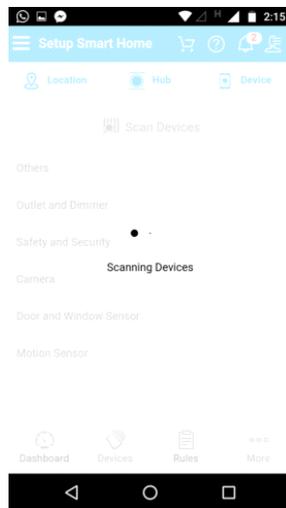

Step 2: Adding Remote Control to Hub >>

Step **A**


Select Room or create new Room



Step 2: Adding Remote Control to Hub >>

Step B


Click on Submit to Add Device in selected Room

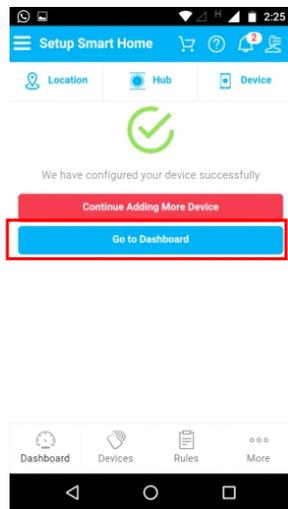

Step 2: Adding Remote Control to Hub >>


Step **C**

Device added successfully

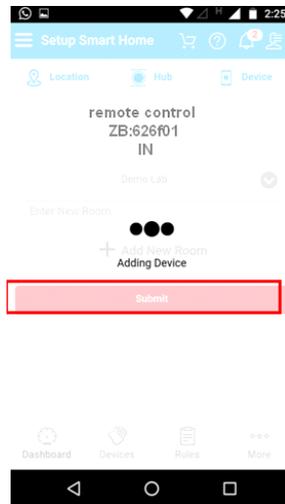

GizmoSmart Dashboard

Once Remote Control is added you will be able to see the option on GizmoSmart Dashboard

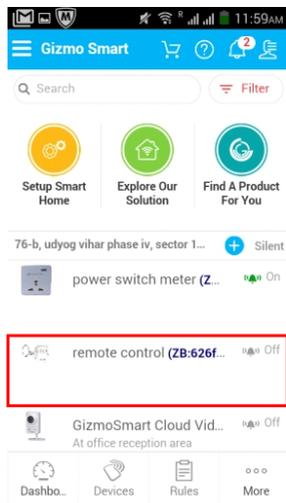

Factory Reset >>

To perform Factory Reset:

- Press and hold Learn/ARM button for 10 seconds, and release the button when LED indicator flashes once.
- The Remote control has been reset to factory default settings and all it's information of previous network has been removed.
- For more support, visit: <http://support.gizmosmart.com> or call +91- 9876298763.

Corporate Office : Kochar Infotech Pvt. Ltd. 76-B, Udyog Vihar, Phase-IV,
Gurgaon, 122 001, India

www.gizmosmart.com • info@gizmosmart.com • +91 98762 98763